



PHARMACY

REFRIGERATION & ACCESSORIES



LEC MEDICAL

PHARMACY RANGE

We provide safe, reliable and energy efficient temperature controlled storage to pharmacies

CONTENTS

- 03 | Lec Medical – Medical Refrigeration Experts
- 04 | Our New Improved Pharmacy Range Explained
- 06 | Countertop Refrigeration
- 08 | Under-counter Refrigeration
- 10 | Freestanding Refrigeration
- 13 | Temperature Mapping
- 14 | Pharmacy Refrigerator Storage Alternatives
- 16 | Pharmacy Refrigeration Specification
- 18 | Secure Drugs Cabinets



Extend your warranty for added peace of mind*

Lec Medical has now launched a comprehensive extended warranty package enabling you to protect your Pharmacy product beyond our free of charge 2 years parts and labour warranty.

This package includes new for old replacement and offers reassurance in the current uncertain economic climate.

Call us today to find out more!

 **0844 815 3742**










* UK only

EXTENDED WARRANTY





REASONS TO CHOOSE LEC MEDICAL

-  All Lec Medical Pharmacy refrigeration conforms to storage standards laid out by The Royal Pharmaceutical Society of Great Britain (RPSGB)
-  We offer free delivery on ALL Pharmacy refrigeration units featured in this brochure*
-  Our entire pharmacy refrigeration range is manufactured in the UK to the highest quality standards
-  We have total confidence in our products and back that up with a 2 year parts and labour warranty*
-  Our award-winning customer help centre is on hand 363 days a year, 7 days a week to offer guidance in the unlikely event of a problem with one of our units, with a team of 180 service engineers covering the whole of the UK to deal with any issues quickly and efficiently*
-  Our large nationwide distribution centre holds stock of most of our range, enabling us to supply products to meet orders promptly and with different delivery options to suit you
-  Lec Medical takes its environmental responsibilities seriously – we always try to use the most environmentally friendly refrigerant gases where possible, meaning our units are not only kinder to the environment but also require less energy to run
-  We are leading approved supplier to the Government Procurement Service, enabling NHS facilities involved with this service to order easily and at a competitive price
-  Every single unit is individually tested and quality checked before it leaves the production line to ensure it is in full working order

*UK only

Supplier to
 Government Procurement
Service



LEC MEDICAL

OUR NEW IMPROVED PHARMACY REFRIGERATION RANGE

We have developed our new range with reliability and ease of use in mind. Our Pharmacy refrigeration range conforms to the guidance set out by the RPSGB and maintains an internal temperature of between +2°C and +8°C. We have added a number of improvements to certain popular models to ensure we are offering you the best possible secure and reliable refrigerated storage. Many of our models are available with different plug options for Europe and Australasia, or with compressors operating at 60Hz.



The National Pharmacy Association (NPA) offers the following guidance to ensure you are utilising your Lec Medical Pharmacy refrigerator in the best way:

- ✓ Do not open the door for prolonged periods
- ✓ Always ensure the door is closed firmly after use
- ✓ Do not overstock the fridge as this will affect the internal airflow
- ✓ Clean the refrigerator regularly
- ✓ Always ensure your fridge has space around it for cooling airflow to prevent the refrigerant system working harder than it needs to



Optional Plug Types

Many of our models are available with a variety of plug types depending on your country. Please contact us for details



Ready to Use

Lec Medical Pharmacy fridges are supplied with a preset temperature range of +2°C to +8°C, meaning they are ready for use as soon as you plug them in



Forced Air Cooling

All Lec Medical Pharmacy refrigerators have forced air cooling to ensure the best temperature stability and rapid temperature recovery after door openings



Energy Efficient Refrigerant

Many models in our new range use R600a refrigerant, which is kinder to the environment as well as being an efficient cooling system, meaning the running costs of the fridge are kept as low as possible. Look out for the R600a symbol for our most efficient models



Storage Flexibility

Shelf heights can be varied in all our units to ensure you are able to maximise the storage potential of your Pharmacy refrigerator



Our NEW advanced controller explained

- ✓ Temperature accuracy to 0.1°C
- ✓ Main panel shows an average internal air temperature and min/max levels can easily be displayed
- ✓ Our high-tech controller will also show a min/max simulated core temperature (allows you to see the actual temperature of contents stored, not simply air temperature)
- ✓ Control panel can be locked to avoid accidental changes to desired settings



 **Solid or Glass Door Option**

Most models come with solid or glass door options, enabling you to select the format which best suits your requirements

 **New Advanced Controller**

Our latest integral controller enables the user to select minimum and maximum temperatures, and manage the warning alarm system at the press of a button

 **Lock Fitted as Standard**

Maintains security and ensures the unit can only be accessed by approved personnel

 **Anti Microbial Handle**

Helps prevent the growth of bacteria and minimise the potential for cross contamination within your pharmacy. Look out for the anti microbial symbol for units with this unique feature

 **Auto Defrost Feature**

Ensures the most efficient cooling, and units with the lowest on-going maintenance

 **Fully Removable Door Seal on all glass door models**

Ideal for maintaining optimum hygiene standards as the door seal can be easily removed for cleaning

 **Fitted Rollers**

Available on all under-counter and freestanding models, makes moving the units for repositioning or cleaning straightforward

LEC MEDICAL

COUNTERTOP REFRIGERATION RANGE



Fitted Lock

Maintains security and helps prevent unauthorised access. All units are supplied with two keys



Integral Controller

Enables you to set the required temperature and easily monitor min/max levels



Anti Microbial Handle

Helps prevent the growth of bacteria and minimise the potential for cross contamination



Wire Shelves and Basket

For optimal air circulation and enables a consistent temperature in the unit



Fully Adjustable Feet

Allow you to vary the height of the unit for maximum stability



PE109C Countertop Pharmacy Refrigerator

Model Number	SKU Code	Gross Capacity	Dimensions H x W x D (mm)	Weight (kg)	Temperature Range Fridge
PE109C	444441788	45 litres	530 x 470 x 465	20	+2°C to +8°C



We offer a comprehensive range of smaller storage capacity models, ideal where space is limited and also as back-up units. The Countertop range is now available in our new green styling and comes complete with a 2 years parts and labour warranty as standard.



PE102C Countertop Pharmacy Refrigerator					
Model Number	SKU Code	Gross Capacity	Dimensions H x W x D (mm)	Weight (kg)	Temperature Range Fridge
PE102C	444441789	41 litres	702 x 379 x 500	23.5	+2°C to +8°C

PE207C Countertop Pharmacy Refrigerator					
Model Number	SKU Code	Gross Capacity	Dimensions H x W x D (mm)	Weight (kg)	Temperature Range Fridge
PE207C	444441792	82 litres	660 x 502 x 595	27.5	+2°C to +8°C




PG102C Countertop Pharmacy Refrigerator					
Model Number	SKU Code	Gross Capacity	Dimensions H x W x D (mm)	Weight (kg)	Temperature Range Fridge
PG102C	444441791	41 litres	702 x 379 x 500	25.5	+2°C to +8°C

PG207C Countertop Pharmacy Refrigerator					
Model Number	SKU Code	Gross Capacity	Dimensions H x W x D (mm)	Weight (kg)	Temperature Range Fridge
PG207C	444441793	82 litres	660 x 502 x 540	30	+2°C to +8°C

LEC MEDICAL

UNDER-COUNTER REFRIGERATION RANGE

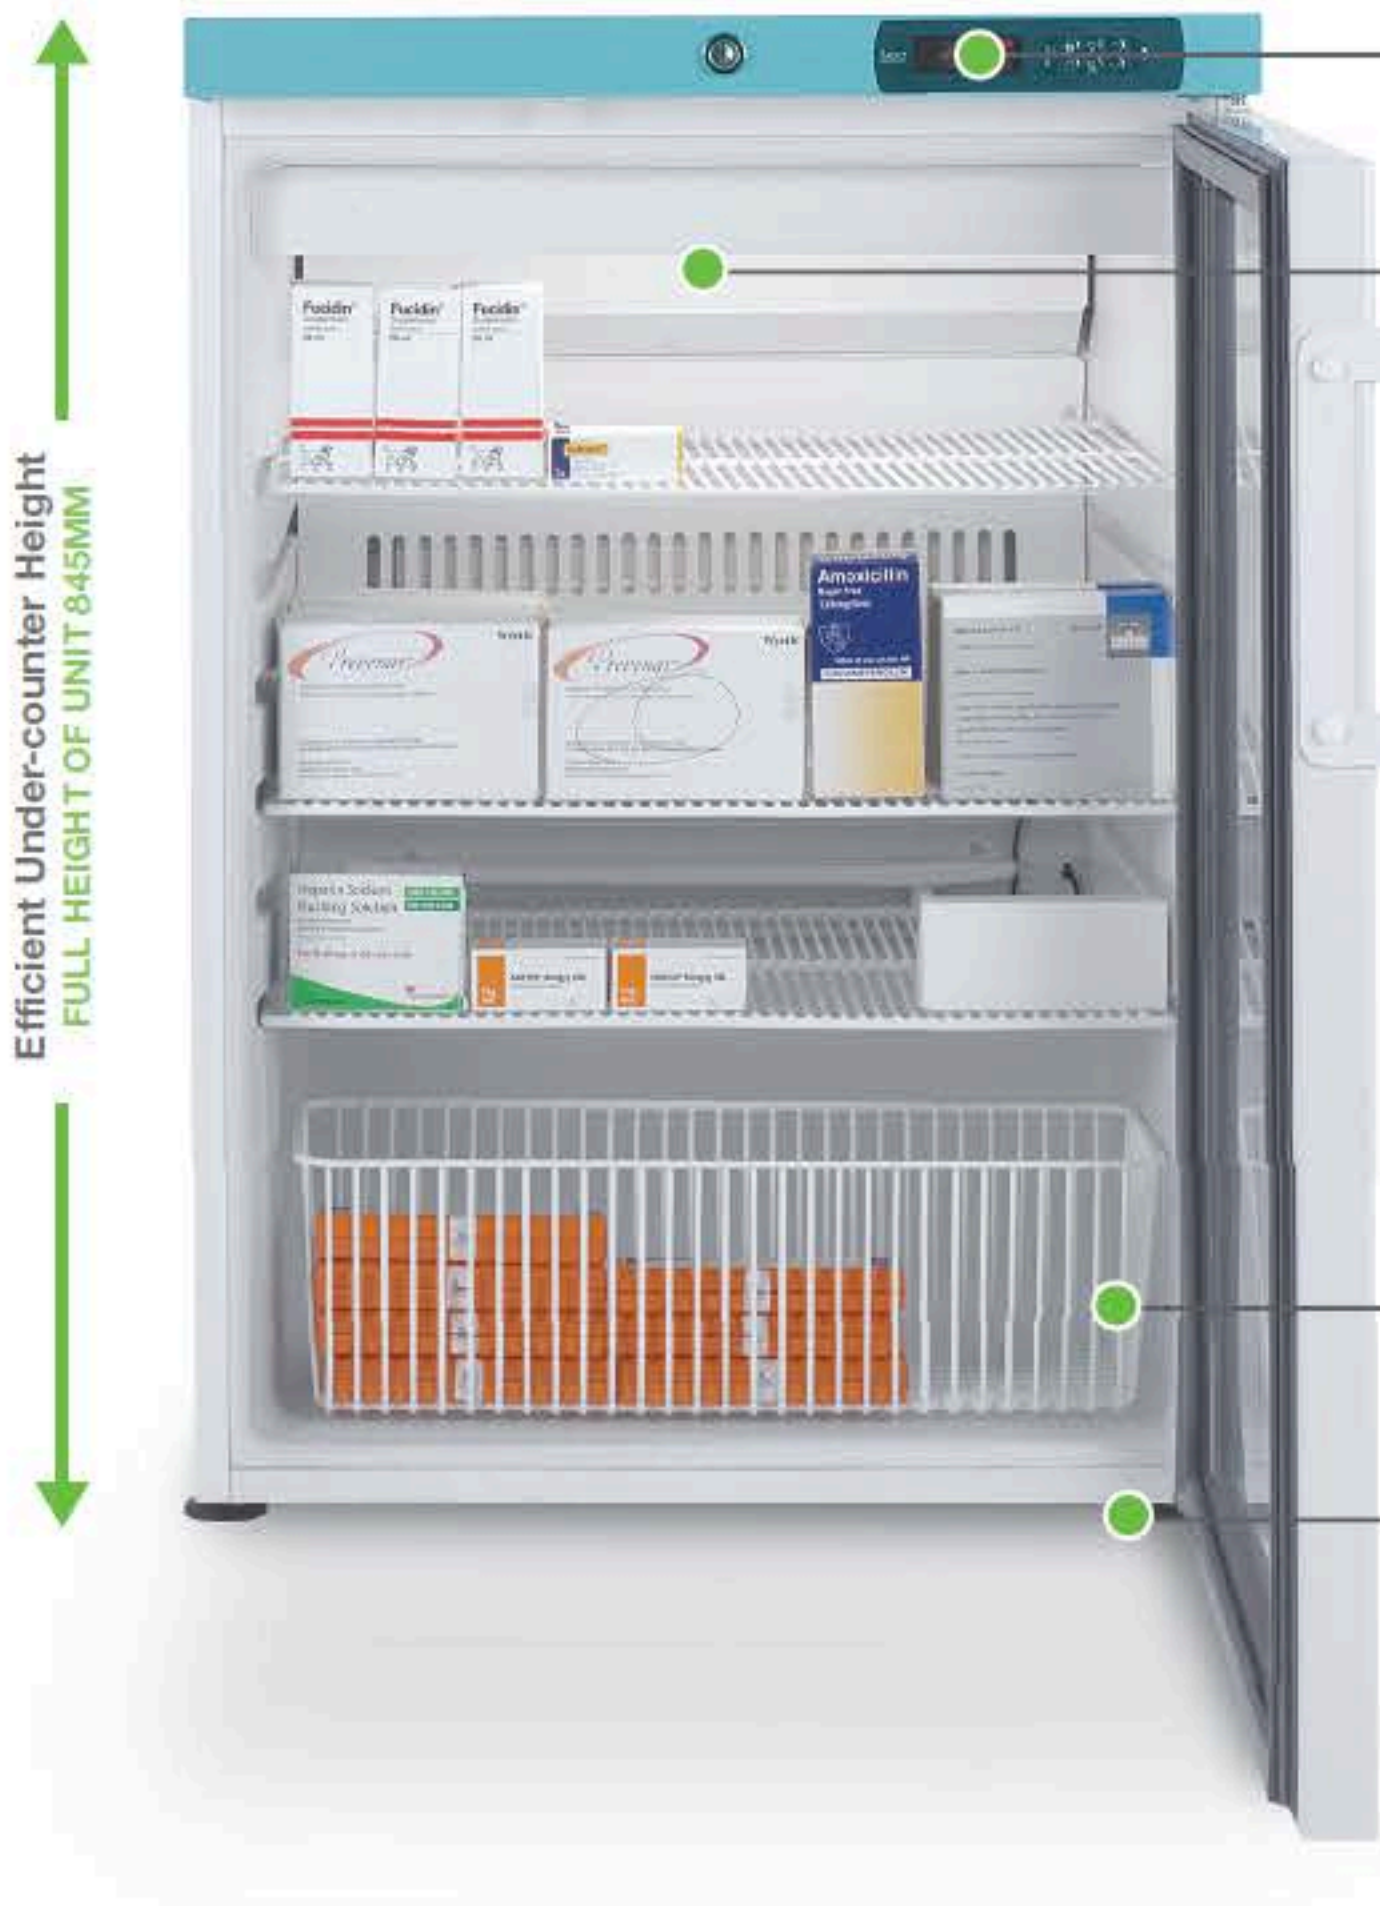

Efficient Under-counter Height
FULL HEIGHT OF UNIT 845MM

New Advanced Controller

Manage the internal temperature and monitor min/max settings at the touch of a button



Internal Light

Turn on and off from the external controller pad
selected models



Anti Microbial Handle

Helps prevent the growth of bacteria and minimise the potential for cross contamination



Wire Shelves and Basket

Enable optimal airflow inside the unit. Shelf positions can be varied for maximum storage capacity



Fitted Rollers

For easy moving and cleaning



PGR151UK Under-counter Pharmacy Refrigerator

Model Number	SKU Code	Gross Capacity	Dimensions H x W x D (mm)	Weight (kg)	Temperature Range Fridge
PGR151UK	444440945	151 litres	845 x 595 x 600	42	+2°C to +8°C



Under-counter refrigeration is a popular and effective storage solution in many busy pharmacies. Our units offer good storage capacity and fit under most countertops, enabling the best use of available space.



PE307C Under-counter Pharmacy Refrigerator

Model Number	SKU Code	Gross Capacity	Dimensions H x W x D (mm)	Weight (kg)	Temperature Range Fridge
PE307C	444441794	107 litres	830 x 495 x 620	31.5	+2°C to +8°C



PSR151UK Under-counter Pharmacy Refrigerator

Model Number	SKU Code	Gross Capacity	Dimensions H x W x D (mm)	Weight (kg)	Temperature Range Fridge
PSR151UK	444440940	151 litres	845 x 595 x 610	37	+2°C to +8°C



PG307C Under-counter Pharmacy Refrigerator

Model Number	SKU Code	Gross Capacity	Dimensions H x W x D (mm)	Weight (kg)	Temperature Range Fridge
PG307C	444441795	107 litres	830 x 495 x 620	36.5	+2°C to +8°C



PGR151UK Under-counter Pharmacy Refrigerator

Model Number	SKU Code	Gross Capacity	Dimensions H x W x D (mm)	Weight (kg)	Temperature Range Fridge
PGR151UK	444440945	151 litres	845 x 595 x 600	42	+2°C to +8°C

LEC MEDICAL

FREESTANDING REFRIGERATION RANGE



New Advanced Controller

Manage the internal temperature and monitor min/max settings at the touch of a button



Internal Light

Turn on and off from the external controller pad

selected models



Anti Microbial Handle

Helps prevent the growth of bacteria and minimise the potential for cross contamination



Wire Shelves and Basket

Enable optimal airflow inside the unit. Shelf positions can be varied for maximum storage capacity



Fitted Rollers

For easy moving and cleaning



PGR334UK Freestanding Pharmacy Refrigerator

Model Number	SKU Code	Gross Capacity	Dimensions H x W x D (mm)	Weight (kg)	Temperature Range Fridge
PGR334UK	444440961	334 litres	1860 x 595 x 625	79	+2°C to +8°C



Lec Medical offers a comprehensive range of larger storage capacity units available in three sizes for maximum flexibility. All units contain a host of features and maximise the storage potential in your pharmacy.



FREESTANDING - PSR273UK



FREESTANDING - PGR273UK



FREESTANDING - PSR334UK



Freestanding Pharmacy Refrigeration					
Model Number	SKU Code	Gross Capacity	Dimensions H x W x D (mm)	Weight (kg)	Temperature Range Fridge
PSR273UK	444440950	273 litres	1565 x 595 x 640	60	+2°C to +8°C
PGR273UK	444440955	273 litres	1565 x 595 x 625	68.5	+2°C to +8°C
PSR334UK	444440960	334 litres	1860 x 595 x 640	69	+2°C to +8°C

Please see [page 12](#) for additional large storage fridges

LEC MEDICAL

FREESTANDING REFRIGERATION RANGE CONTINUED



PE1607C Freestanding Pharmacy Refrigerator

Model Number	PE1607C
SKU Code	444441796
Gross Capacity	444 litres
Dimensions H x W x D (mm)	1688 x 685 x 910
Weight (kg)	96
Temperature Range Fridge	+2°C to +8°C



PG1607C Freestanding Pharmacy Refrigerator

Model Number	PG1607C
SKU Code	444441797
Gross Capacity	444 litres
Dimensions H x W x D (mm)	1688 x 685 x 910
Weight (kg)	106
Temperature Range Fridge	+2°C to +8°C

Freestanding Range at a Glance

Model	Gross Capacity	Door	Energy Efficient R600a	Anti Microbial Handle	New Advanced Controller	Internal Light	Number of Shelves	Number of Shelf Positions	Plug Types Available
PSR273	273L	Solid	✓	✓	✓	✓	5	12	UK, EU, AUS
PGR273	273L	Glass	✓	✓	✓	✓	5	12	UK, EU, AUS
PSR334	334L	Solid	✓	✓	✓	✓	6	14	UK, EU, AUS
PGR334	334L	Glass	✓	✓	✓	✓	6	14	UK, EU, AUS
PE1607C	444L	Solid	✗	✗	✗	✗	5	30	UK, EU, AUS
PG1607C	444L	Glass	✗	✗	✗	✓	5	30	UK, EU, AUS



TEMPERATURE MAPPING



The Lec Medical data logger is a simple and reliable way of recording the temperature inside your Pharmacy fridge over a period of time.



EASY TO SET UP

This USB compatible data recorder is a simple and cost effective way of recording temperature within all Pharmacy refrigerators.

Simply plug the data logger into your PC and set the logging rate and start time.

Then place the unit on a shelf inside the fridge, shut the door, and the logger will record the temperature at the intervals you select (every 10 seconds up to every 12 hours).



EASY TO DOWNLOAD

We supply the logger with software, allowing the user to quickly and easily configure the unit to meet their requirements.

Simply plug the logger into any USB port on your computer and download the stored data.

You can use this data in many ways and it can be easily displayed as a graph, enabling you to quickly view the temperature history inside the fridge over time.



LONG LASTING

- ✓ The logger works in a wide temperature range from -35°C to +80°C


- ✓ Large memory capacity - you can store up to 16,382 readings

- ✓ The Lec Medical data logger has an easy to replace lithium battery for regular or extended use



Lec Medical Data Logger	
Model Number	ATMDL01
SKU Code	444448729
Dimensions H x W x D (mm)	25 x 25 x 100
Measurement Range	-35°C to +80°C
Accuracy	+/- 1°C

Example Output

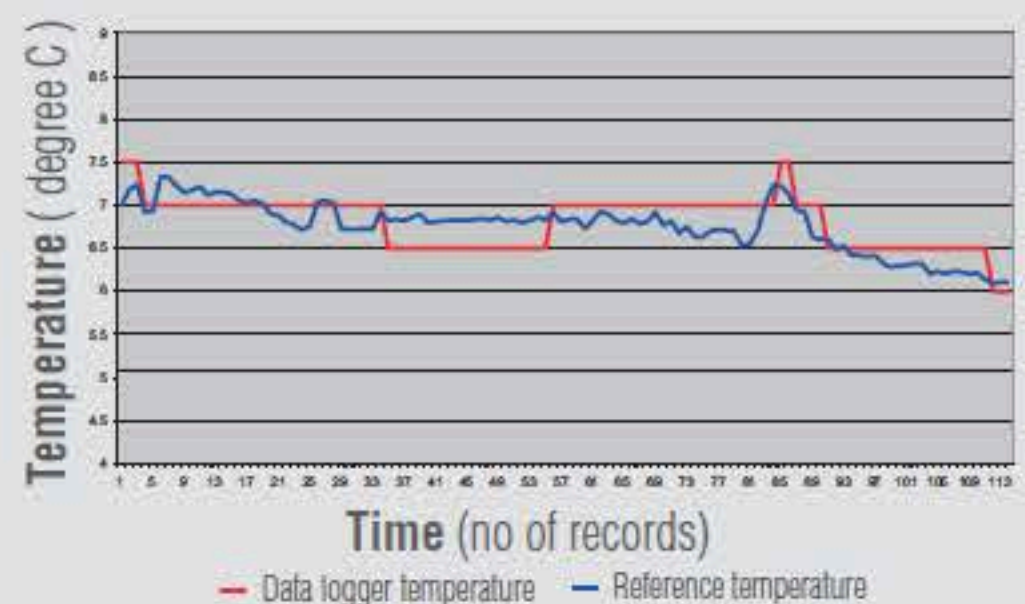

LEC MEDICAL

COST EFFECTIVE & SIMPLE STORAGE ALTERNATIVES

Anti-bacterial Sit On Shelf Organisers

Our tough plastic shelf organisers are perfect for organising drugs and vaccines most effectively. They simply sit on existing fridge shelves.

Key Features

- ✓ 448mm wide x 350mm deep footprint – suitable for many Lec models or other units already in your pharmacy
- ✓ Anti-bacterial plastic inhibits bacterial growth and minimises the risk of cross contamination
- ✓ Supplied with 17mm pre-drilled holes to maintain effective cooling airflow within the fridge
- ✓ Extra dividers available separately to compartmentalise certain drugs



Sit On Shelf Organiser

	SKU Code	Dimensions W x D (mm)
Base Tray	444441879	448 x 350
Dividers	444441880	–

Fridges with Fitted Drawer Systems

We now offer our most popular under-counter and freestanding models with pre-fitted drawers for an effective storage system in your pharmacy. The units are available in two options:

Plastic Anti-bacterial Fitted Drawers

- ✓ Anti-bacterial plastic minimises the potential for bacterial growth and cross contamination
- ✓ Easy open for simple replenishment
- ✓ Simple to lift out and remove for easy cleaning
- ✓ Supplied with 17mm pre-drilled holes to maintain effective airflow within the fridge
- ✓ Extra dividers available to compartmentalise certain drugs

Aluminium Drawers

- ✓ Robust aluminium construction
- ✓ Easy open for simple replenishment
- ✓ Removable for easy cleaning
- ✓ Supplied with 17mm pre-drilled holes to maintain effective airflow within the fridge
- ✓ Extra dividers available to compartmentalise certain drugs



Lec Medical offers a range of storage solutions for our Pharmacy refrigeration range, enabling you to manage the space inside the fridge effectively and safely.

MIX & MATCH

On-shelf organisers, anti-bacterial shelves and aluminium shelves are all interchangeable and **Lec Medical can offer you a bespoke service** to create the Pharmacy refrigeration storage solution to best suit your needs.



SOLID DOOR

Pharmacy Fridge Models with Pre-fitted Shelves



Model Number	SKU Code	Description	Number of Shelves
PSR151UK-ABDP	444440944	PSR151 with Fitted Anti-bacterial Shelves	4
PSR273UK-ABDP	444440954	PSR273 with Fitted Anti-bacterial Shelves	6
PSR151UK-ALDP	444441890	PSR151 with Fitted Aluminium Shelves	4
PSR273UK-ALDP	444441892	PSR273 with Fitted Aluminium Shelves	6

GLASS DOOR

Pharmacy Fridge Models with Pre-fitted Shelves



Model Number	SKU Code	Description	Number of Shelves
PGR151UK-ABDP	444440949	PGR151 with Fitted Anti-bacterial Shelves	4
PGR273UK-ABDP	444440959	PGR273 with Fitted Anti-bacterial Shelves	6
PGR151UK-ALDP	444441891	PGR151 with Fitted Aluminium Shelves	4
PGR273UK-ALDP	444441893	PGR273 with Fitted Aluminium Shelves	6

Shelf Organisers and Dividers

SKU Code	Description	
444441879	Sit On Shelf White Anti-bacterial Organiser	Suitable for models with minimum internal width of 450 mm
444441880	Dividers for Anti-bacterial Trays	Suitable for on-shelf organisers and anti-bacterial drawers
444441881	Dividers for Aluminium Trays	Suitable for aluminium drawer models

We also offer drawer systems for PSR/PGR 334 models, as well as different configurations for our PSR/PGR151 and PSR/PGR273 models. **Please call us today** to discuss your requirements so that we can provide an individual price.

Note – specially configured units will be made to order and may attract a typical lead time of 4-6 weeks.



LEC MEDICAL

DETAILED SPECIFICATIONS



Model No	PE102C	PG102C	PE109C	PE207C	PG207C	PE307C	PG307C	PSR151UK
Description	Countertop	Countertop	Countertop	Countertop	Countertop	Under-counter	Under-counter	Under-counter
SKU code	444441789	444441791	444441788	444441792	444441793	444441794	444441795	444440940
EAN code	5052263017984	5052263017917	5052263017887	5052263017924	5052263017931	5052263017948	5052263017955	5052263009400
Gross capacity (L)	41	41	45	82	82	107	107	151
Net capacity (L)	35	35	37	67	67	103	103	141
External width (mm)	379	379	470	502	502	495	495	595
External depth (mm)	500	500	465	540	540	620	620	610 (w/o handle) 635 (inc handle)
External height (mm)	702	702	530	660	660	830	830	845
Product weight (kg)	23.5	25.5	20	27.5	30	31.5	36.5	37
Packed width (mm)	450	450	520	520	520	560	560	657
Packed depth (mm)	558	558	595	595	595	655	655	694
Packed height (mm)	740	740	675	675	675	850	850	872
Packed weight (kg)	25.5	27.5	23	30.5	33	35	40	41
Country of origin	UK	UK	UK	UK	UK	UK	UK	UK
Internal dimensions (wxdxh)	245x310x400	245x310x400	410x270x400	419x315x540	419x320x540	403x400x700	403x400x700	500x450x705 (Step: 165d x 185h)
External finish	Painted steel	Painted steel	Painted steel	Painted steel	Painted steel	Painted steel	Painted steel	Painted steel
Internal finish	HIPS*	HIPS*	HIPS*	HIPS*	HIPS*	HIPS*	HIPS*	HIPS*
Type of plastic	SRL800 (HIPS/ABS mix)	SRL800 (HIPS/ABS mix)	SRL800 (HIPS/ABS mix)	SRL800 (HIPS/ABS mix)	SRL800 (HIPS/ABS mix)	SRL800 (HIPS/ABS mix)	SRL800 (HIPS/ABS mix)	SRL800 (HIPS/ABS mix)
Door finish	Painted steel	Painted aluminium	Painted steel	Painted steel	Painted aluminium	Painted steel	Painted aluminium	Painted steel
Temperature range	+2°C to +8°C	+2°C to +8°C	+2°C to +8°C	+2°C to +8°C	+2°C to +8°C	+2°C to +8°C	+2°C to +8°C	+2°C to +8°C
Colour	White/green	White/green	White/green	White/green	White/green	White/green	White/green	White/green
Door type	Solid	Glass	Solid	Solid	Glass	Solid	Glass	Solid
Door style	Hinged R/H only	Hinged, R/H only	Hinged, Reversible	Hinged, Reversible	Hinged, Reversible	Hinged, Reversible	Hinged, Reversible	Hinged, Reversible
Door open depth (mm)	810	810	910	976	976	1050	1050	1165
Replacement door seal	No	No	No	No	Yes	No	Yes	No
Open door sensor	Yes	Yes	No	Yes	Yes	Yes	Yes	Yes
Lock	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes, 2 Keys
Adjustable feet (number & position)	No	No	2, Front	No	No	1, Front	1, Front	2 Adjustable Front Feet, 2 Rear Rollers
Temperature display on panel	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes
Temperature alarm	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes
Number of shelves	2	2	1	2	2	2	2	3
Number of shelf positions	5	5	1	2	2	4	4	6
Shelf size (dxwxh) (mm)	2: 270x308x6	2: 270x308x6	402x200x6	2: 438x274x6	2: 438x274x6	2: 427x374x6	2: 427x374x6	3: 400x520x6
Shelf material	Wire	Wire	Wire	Wire	Wire	Wire	Wire	Wire
Number of baskets	0	0	1	1	1	1	1	1
Basket material	-	-	Wire	Wire	Wire	Wire	Wire	Wire
Interior light	No	No	No	No	Yes	No	Yes	No
Fan	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes
Spark free	No	No	No	No	No	No	No	No
Auto or manual defrost	Automatic	Automatic	Automatic	Automatic	Automatic	Automatic	Automatic	Automatic
Controller type	Digital, External	Digital, External	Digital, External	Digital, External	Digital, External	Digital, External	Digital, External	Digital, External
Climate class	SN	SN	N	N	N	N	N	SN
Refrigerant type	R134a	R134a	R134a	R134a	R134a	R134a	R134a	R600a
CFC free	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes
HFC free	No	No	No	No	No	No	No	Yes
HCFC free	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes
Ammonia free	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes
UK 3 pin plug	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes
Other plug types available	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes
Voltage supply	230	230	230	230	230	230	230	230
Aux output	No	No	No	No	No	Yes	Yes	Yes
Insulation thickness (mm)	40	40	30	30	30	35	35	45
Insulation type	Cyclopentane	Cyclopentane	Cyclopentane	Cyclopentane	Cyclopentane	Cyclopentane	Cyclopentane	Cyclopentane
Anti microbial handle	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes
Optional drawer system available	-	-	-	-	-	-	-	Yes

*High Impact Polystyrene





Model No	PGR151UK	PSR273UK	PGR273UK	PSR334UK	PGR334UK	PE1607C	PG1607C
Description	Under-counter	Freestanding	Freestanding	Freestanding	Freestanding	Freestanding	Freestanding
SKU code	444440945	444440950	444440955	444440960	444440961	444441796	444441797
EAN code	5052263009455	5052263009509	5052263009554	5052263009608	5052263009615	5052263017962	5052263017979
Gross capacity (L)	151	273	273	334	334	444	444
Net capacity (L)	141	269	269	331	331	393	393
External width (mm)	595	595	595	595	595	685	685
External depth (mm)	600 (w/o handle) 635 (with handle)	640 (w/o handle) 670 (with handle)	625 (w/o handle) 660 (with handle)	640 (w/o handle) 670 (with handle)	625 (w/o handle) 660 (with handle)	910	910
External height (mm)	845	1565	1565	1860	1860	1688	1688
Product weight (kg)	42	60	68.5	69	79	96	106
Packed width (mm)	657	650	650	650	650	770	770
Packed depth (mm)	694	727	727	727	727	950	950
Packed height (mm)	872	1585	1585	1885	1885	1810	1810
Packed weight (kg)	46	65	73.5	75	85	117	127
Country of origin	UK	UK	UK	UK	UK	UK	UK
Internal dimensions (wxdxh)	500x450x705 (Step: 165d x 185h)	480x445x1382 (Step: 255h x 175d)	480x445x1382 (Step: 255h x 175d)	480x445x1682 (Step: 265h x 175d)	480x445x1682 (Step: 265d x 175h)	590x670x1170	590x670x1170
External finish	Painted aluminium door	Painted steel	Painted aluminium door	Painted steel	Painted aluminium door	Painted steel	Painted steel
Internal finish	HIPS*	HIPS*	HIPS*	HIPS*	HIPS*	HIPS*	HIPS*
Type of plastic	SRL800 (HIPS/ABS mix)	SRL800 (HIPS/ABS mix)	SRL800 (HIPS/ABS mix)	SRL800 (HIPS/ABS mix)	SRL800 (HIPS/ABS mix)	SRL800 (HIPS/ABS mix)	SRL800 (HIPS/ABS mix)
Door finish	Painted aluminium	Painted steel	Painted aluminium	Painted steel	Painted aluminium	Painted steel	Painted aluminium
Temperature range	+2°C to +8°C	+2°C to +8°C	+2°C to +8°C	+2°C to +8°C	+2°C to +8°C	+2°C to +8°C	+2°C to +8°C
Colour	White/green	White/green	White/green	White/green	White/green	White/green	White/green
Door type	Glass	Solid	Glass	Solid	Glass	Solid	Glass
Door style	Hinged, Reversible	Hinged, Reversible	Hinged, Reversible	Hinged, Reversible	Hinged, Reversible	Hinged, R/h Only	Hinged, R/h Only
Door open depth (mm)	1165	1185	1180	1185	1180	tbc	tbc
Replacement door seal	Yes	No	Yes	No	Yes	Yes	Yes
Open door sensor	Yes	Yes	Yes	Yes	Yes	Yes	Yes
Lock	Yes, 2 Keys	Yes, 2 Keys	Yes, 2 Keys	Yes, 2 Keys	Yes, 2 Keys	Yes	Yes
Adjustable feet (number & position)	2 Adjustable Front Feet, 2 Rear Rollers	2 Adjustable Front Feet, 2 Rear Rollers	2 Adjustable Front Feet, 2 Rear Rollers	2 Adjustable Front Feet, 2 Rear Rollers	2 Adjustable Front Feet, 2 Rear Rollers	Castors	Castors
Temperature display on panel	Yes	Yes	Yes	Yes	Yes	Yes	Yes
Temperature alarm	Yes	Yes	Yes	Yes	Yes	Yes	Yes
Number of shelves	3	5	5	6	6	5	5
Number of shelf positions	6	12	12	14	14	30	30
Shelf size (dxwxh) (mm)	3: 400x520x6	4: 385x500x6 1: 340x497x6	4: 385x500x6 1: 340x497x6	6: 385x500x6	6: 385x500x6	5: 536x609x6	5: 536x609x6
Shelf material	Wire	Wire	Wire	Wire	Wire	Wire	Wire
Number of baskets	1	1	1	1	1	0	0
Basket material	Wire	Wire	Wire	Wire	Wire	-	-
Interior light	Yes	Yes	Yes	Yes	Yes	No	Yes
Fan	Yes	Yes	Yes	Yes	Yes	Yes	Yes
Spark free	No	No	No	No	No	No	No
Auto or manual defrost	Automatic	Automatic	Automatic	Automatic	Automatic	Automatic	Automatic
Controller type	Digital, External	Digital, External	Digital, External	Digital, External	Digital, External	Digital, External	Digital, External
Climate class	SN	SN	SN	SN	SN	N	N
Refrigerant type	R600a	R600a	R600a	R600a	R600a	R134a	R134a
CFC free	Yes	Yes	Yes	Yes	Yes	Yes	Yes
HFC free	Yes	Yes	Yes	Yes	Yes	No	No
HCFC free	Yes	Yes	Yes	Yes	Yes	Yes	Yes
Ammonia free	Yes	Yes	Yes	Yes	Yes	Yes	Yes
UK 3 pin plug	Yes	Yes	Yes	Yes	Yes	Yes	Yes
Other plug types available	Yes	Yes	Yes	Yes	Yes	Yes	Yes
Voltage supply	230	220-240v/50hz	220-240v/50hz	220-240v/50hz	220-240v/50hz	230	230
Aux output	Yes	Yes	Yes	Yes	Yes	Yes	Yes
Insulation thickness (mm)	45	60	60	60	60	40	40
Insulation type	Cyclopentane	Cyclopentane	Cyclopentane	Cyclopentane	Cyclopentane	Cyclopentane	Cyclopentane
Anti microbial handle	Yes	Yes	Yes	Yes	Yes	No	No
Optional drawer system available	Yes	Yes	Yes	Yes	Yes	-	-

*High Impact Polystyrene

LEC MEDICAL

SECURE DRUGS CABINETS

Providing carefully designed shelving that ensures maximum utilisation of the available space.

Lec Medical's range of secure drugs cabinets has been designed specifically to meet the requirements of a busy medical environment. Available in 14 sizes, our secure drug cabinets satisfy the latest specifications required for the safe storage of controlled drugs and other substances.

Compliance

- All Lec Medical drugs cabinets exceed the requirements of the Misuse of Drugs (Safe Custody) Regulations 1973 and fully comply with BS2281
- The cabinets have been tested by an independent authoritative inspectorate to comply with Home Office guidelines

Durability


- All cabinets are powder coated and oven baked for a tough, long lasting finish
- Minimum 16 gauge (approximately 1.6mm) mild steel used on all cabinets up to a maximum of 6mm on heavier duty cabinets

Security

- All products are fitted with a 7-lever mortice dead lock
- Optional alarm light and alarm with power supply available – factory fitted
- Multi-point locking featured on selected cabinets

Flexibility

- Floor or wall mounted options available
- Floor fixing kit available for selected cabinets
- CDC560 and CDC570 have partially adjustable shelves

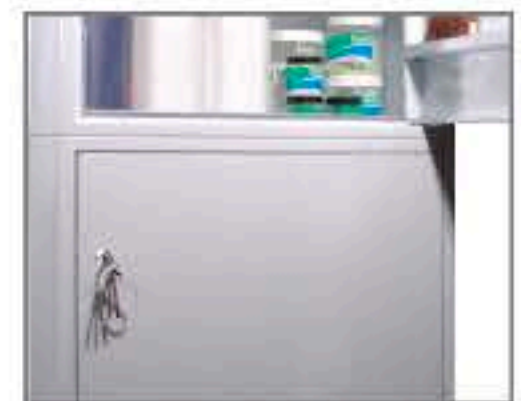

Secure Drugs Cabinets Range

Model Number	SKU Code	Cabinet Thickness (approximate)	Door Thickness (approximate)	Dimensions W x H x D (mm)	Weight (kg)	Multi-point Locking	No of Shelves	Floor/Wall Mounting	Floor Fixing Kit Available
CDC560	444449856	1.6mm	1.6mm	565 x 480 x 160	18	No	2	Wall	Yes
CDC570	444449857	1.6mm	1.6mm	570 x 520 x 200	20	No	2	Wall	Yes
CDC760	444449858	2mm	2mm	760 x 865 x 305	55	No	3	Wall	Yes
CDC1250	444449859	2mm	2mm	760 x 1730 x 305	110	No	6	Floor or Wall	Yes
CDC300	444449860	2mm	2mm	300 x 250 x 150	9.5	No	0	Wall	No
CDC600	444449861	6mm	2mm	500 x 600 x 300	45	Yes	2	Wall	No
CDC750	444449862	6mm	2mm	500 x 750 x 330	70	Yes	2	Wall	Yes
GDC210L	444449863	2mm	2mm	210 x 300 x 270	9	No	0	Wall	Yes
CDC335L	444449864	2mm	2mm	335 x 300 x 270	10	No	0	Wall	Yes
CDC850	444449865	2mm	2mm	500 x 850 x 450	45	No	2	Floor	N/A
CDC550	444449866	2mm	2mm	500 x 550 x 300	40	No	2	Wall	Yes
CDC350	444449867	6mm	6mm	350 x 500 x 300	45	Yes	1	Floor	N/A
CDC450	444449868	6mm	6mm	450 x 850 x 335	100	Yes	2	Floor	N/A
CDC470	444449869	6mm	6mm	470 x 695 x 480	95	Yes	2	Floor	N/A



Suitable for:

- ✔ Hospitals
- ✔ Health Centres
- ✔ Pharmacies
- ✔ Nursing/Care Homes
- ✔ Clinics



CDC560 Secure Drugs Cabinet

Model Number	SKU Code	Dimensions H x W x D (mm)	Weight (kg)
CDC560	444449856	565 x 480 x 160	18



CDC570 Secure Drugs Cabinet

Model Number	SKU Code	Dimensions H x W x D (mm)	Weight (kg)
CDC570	444449857	570 x 520 x 200	20



CDC1250 Secure Drugs Cabinet

Model Number	SKU Code	Dimensions H x W x D (mm)	Weight (kg)
CDC1250	444449859	760 x 1730 x 305	110




CDC760 Secure Drugs Cabinet

Model Number	SKU Code	Dimensions H x W x D (mm)	Weight (kg)
CDC760	444449858	760 x 865 x 305	55

Heavy Duty Cabinets

Model Number	SKU Code	Dimensions H x W x D (mm)	Weight (kg)
CDC350	444449867	350 x 500 x 300	45
CDC450	444449868	450 x 850 x 335	100
CDC470	444449869	470 x 695 x 480	95

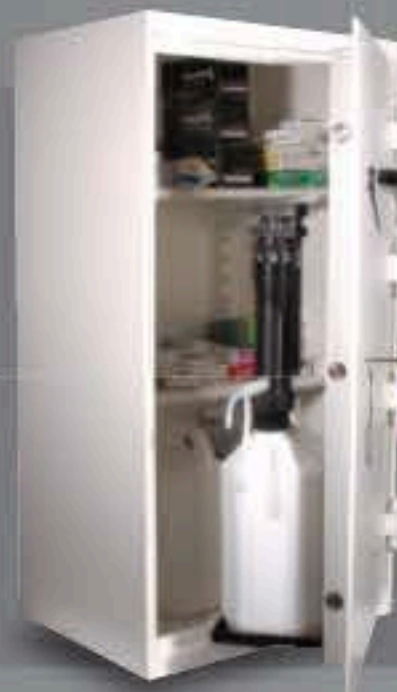



Lec
MEDICAL

- **Sales Enquiries:**
email: sales@gdpa.co.uk
tel: 0844 815 3742
fax: 0844 815 3748
- **Marketing Enquiries:**
email: marketing@gdpa.co.uk
tel: 0844 248 4661
- **Spares and After Sales Service:**
email: info@gdha.com
tel: 0844 815 3755
fax: 0844 815 3748
- **For all International (Non-UK) Enquiries:**
email: sales@gdpa.co.uk
tel: +44 151 493 3281
fax: +44 151 432 7082
- **Address:**
Lec Medical
Stoney Lane, Prescott
Merseyside L35 2XW
- For any other information, please visit:
www.lec-medical.co.uk

Supplier to
 Government Procurement
Service

Glen Dimplex 
PROFESSIONAL APPLIANCES

Glen Dimplex Professional Appliances
is part of the Glen Dimplex Group

Glen Dimplex Professional Appliances operates the policy of continual improvement and development. Therefore we reserve the right to change the specification of any product without prior notice. All dimensions in the publication are approximate. Information correct at time of going to print. Please note that ongoing product improvement may result in minor changes in product technical specification. Where possible this will be communicated prior to supply. Please contact customer services for further information. E&OE.

02/12/V02

